


Wall Mount Mailbox Installation

****NOTE: KEYS are secured to top of box**

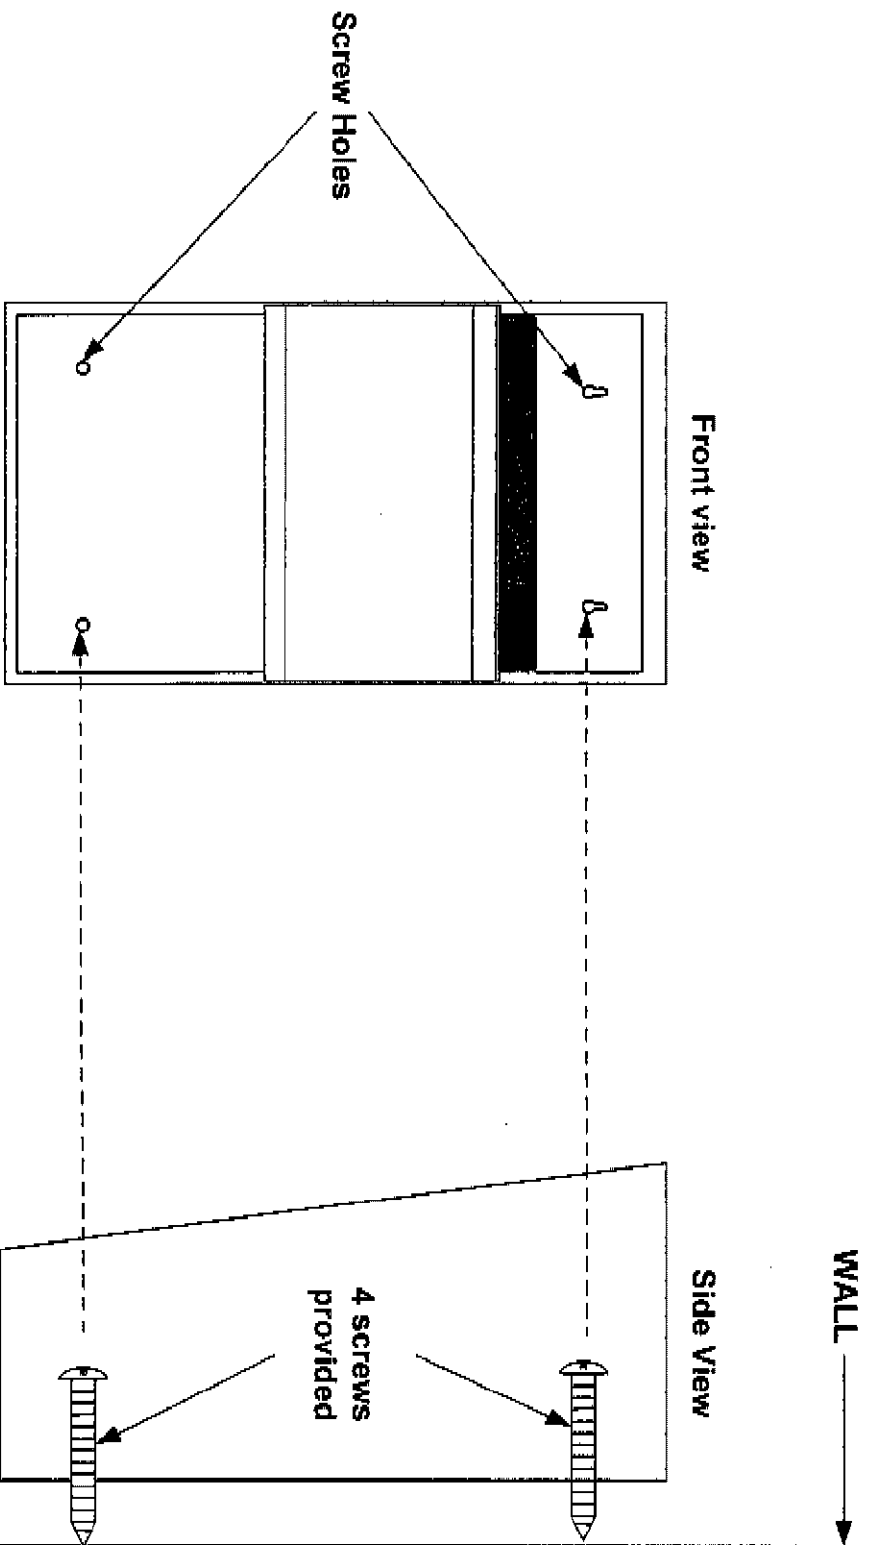

Front view

Side View

Check with your local Post Office for the exact height

48"-60"

Finish Floor Level

Although basic mounting hardware is included, please ensure to use proper mounting hardware for your wall type. When in doubt, consult your local hardware store. To install the wall mount box, open the top and bottom doors to access the holes to secure box to the wall. Place the box where you would like it and mark the TOP holes through the box. If possible, find a stud in the wall and line up the screw holes over the stud. If you cannot find a stud, we recommend you use a plastic or metal anchor. If you are installing onto a brick wall, we recommend using a "Tapcon" concrete screw. Install the 2 top screws leaving them exposed about 1/8". Place the box over these 2 screws like a picture frame and let the box hang. Tighten the top screws and install the bottom 2 screws. If you have any questions, please do not hesitate to contact us at 1-800-587-5257.